



Keeping your fleet covered

CHEVRON KIT APPLICATION GUIDE YOUR STEP BY STEP INSTRUCTIONS



THANK YOU FOR PURCHASING YOUR CHAPTER 8 KIT FROM FLEET ID LTD

Getting started

Please read the following instructions thoroughly before starting to apply your kit.

On receiving your new Chapter 8 kit please ensure that you have all of the components shown on your drawing proof.

Before commencement of application, please ensure all panels are received and checked off against the original plan as mistakes cannot be refunded.

SURFACE PREPARATION

- Check that the vehicle you are applying to is free of any rust, grease or flaking paint.
- The air temperature and vehicle temperature should be above 10°C for best fitting results.
- Wash the area of the vehicle you are fitting to thoroughly with soapy water and dry thoroughly, removing all traces of water using a lint free cloth.
- Use Avery Surface Cleaner to degrease the area ready for fitting to begin.
- For best results the surface area must be clean and free from waxes, grease, polishes, silicones, rust, hand and finger prints and any flaking and peeling paint.
- Remove any vehicle manufacturer and model badges from the vehicle - do not cut the graphic panels to fit around them. This will ensure the best results from the material and will not compromise the material manufacturers warranty in any way. Replace badges when fitting is complete.

WHAT YOU WILL NEED TO FIT YOUR KIT:

WASHING EQUIPMENT

To wash and dry the vehicle in preparation for fitting.

AVERY SURFACE CLEANER

Use with a clean lint free cloth to aid in the degreasing process, ensuring any residue is removed.

MASKING TAPE

Used to position the graphic on the vehicle before fitting begins and to ensure you have all the parts required for completing the fitting of your kit.

PLASTIC APPLICATOR

For applying firm strokes to the vinyl surface, ensuring sufficient bond to the vehicle and for removing any air pockets that may appear within the face film.

SNAP OFF KNIVES


To remove any air bubbles and excess backing paper before applying to the vehicle.

DOOR LOZENGES

Provided as part of the kit to fit internally on the doors


STEP 1

Position all parts of the kit onto your vehicle using masking tape.
 Ensure all the chevrons are lined up correctly right across the area of the vehicle you are fitting to.
 Ensure all parts are present and correct.
 Each panel is already hinged together and is ready for fitting.

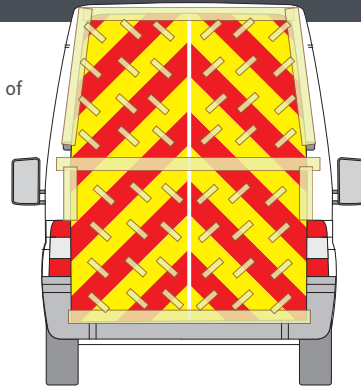

STEP 2


Starting from the centre of the vehicle working outwards to the edge of the vehicle hinge back the first panel and remove the backing paper.
 Ensure you keep the film held tightly away from the surface of the vehicle ready for application.

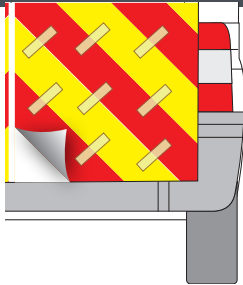

WE ONLY RECOMMEND DRY APPLICATION FOR ALL OF THE KITS THAT WE PROVIDE.


STEP 3

Using the plastic applicator squeegee the film down to the surface of the vehicle using firm horizontal strokes overlapping at the edges of each panel to ensure maximum adhesion.
 During this process always ensure the graphic is kept tight to avoid trapping air and creasing. Do not allow the graphic to touch the surface of the vehicle with the backing removed in advance of the applicator.

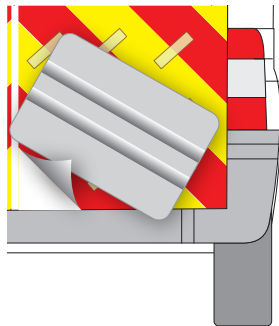

STEP 4

Repeat this process for each individual panel in each area supplied for the vehicle continuing to work from the centre of the vehicle outwards removing masking of each hinged individual panel.

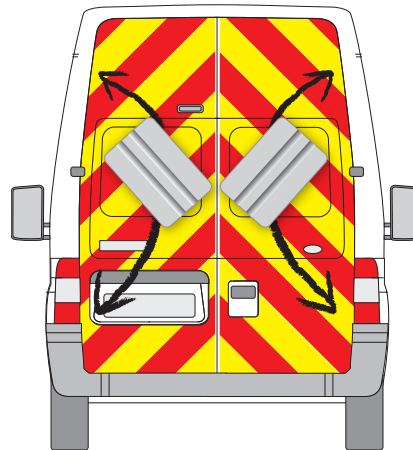


STEP 5

Once you have completed this process for all panels in all areas of the vehicle ensure all the graphic is adhered overall especially on the edges.
 Then using a snap off knife remove any bubbles that are present in the face film then squeegee the whole graphic a final time to be sure of maximum adhesion to the whole graphic.




STEP 6

Door lozengers apply to a flat area of the edge of all open doors on vehicle.
 Once positioned remove backing paper then using firm horizontal strokes squeegee to the surface of the internal doors.

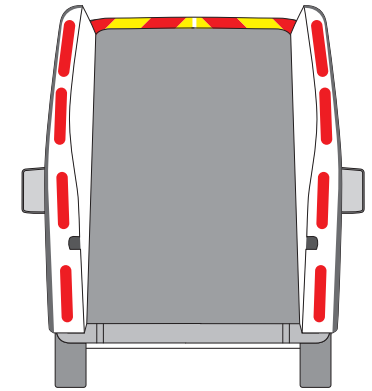

STEP 7

Using a lint free cloth wipe down covered area of the graphic to remove any dirt particles that may have built up during the fitting process.

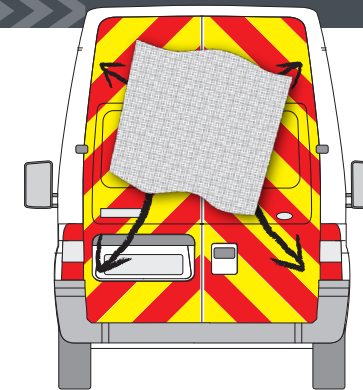

WE CAN ALSO OFFER A FITTING SERVICE IF YOU DO NOT FEEL COMFORTABLE FITTING YOUR CHAPTER 8 KITS




LOOKING AFTER YOUR LIVERY - VEHICLE CLEANING GUIDELINES




CORRECT

- ✓ Use a fan spray of water
- ✓ Maintain nozzle more than 1200mm from livery edges
- ✓ Maximum 75 bar water pressure
- ✓ Maximum water temperature 38°C
- ✓ Maintain angle greater than 45 degrees to vehicle
- ✓ Use a mild detergent, clean water and soft brush
- ✓ Avoid chevron tips, corners and vulnerable areas of kit

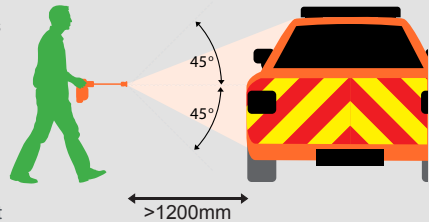

INCORRECT

- ✗ Do not direct high pressure water at edges of sheeting
- ✗ Do not hold nozzle closer than 1200mm to livery
- ✗ Do not direct water at angle of less than 45° to livery
- ✗ Do not use solvents, abrasive, alcohol based cleaners or vehicle under body cleaning solutions
- ✗ Do not steam clean liveries

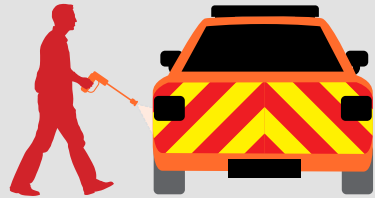

Unique Reference Number:

0845 2098775

YOUR AFTERCARE

In case you should need any replacement panels for your kit in the future, a sticker will be provided with your kit showing your unique reference number. Place the sticker in your vehicle and call the contact number whenever you need us.